


1 Instruction sheet

1.1 Easy Access seal replacement V(C/S) 85 B

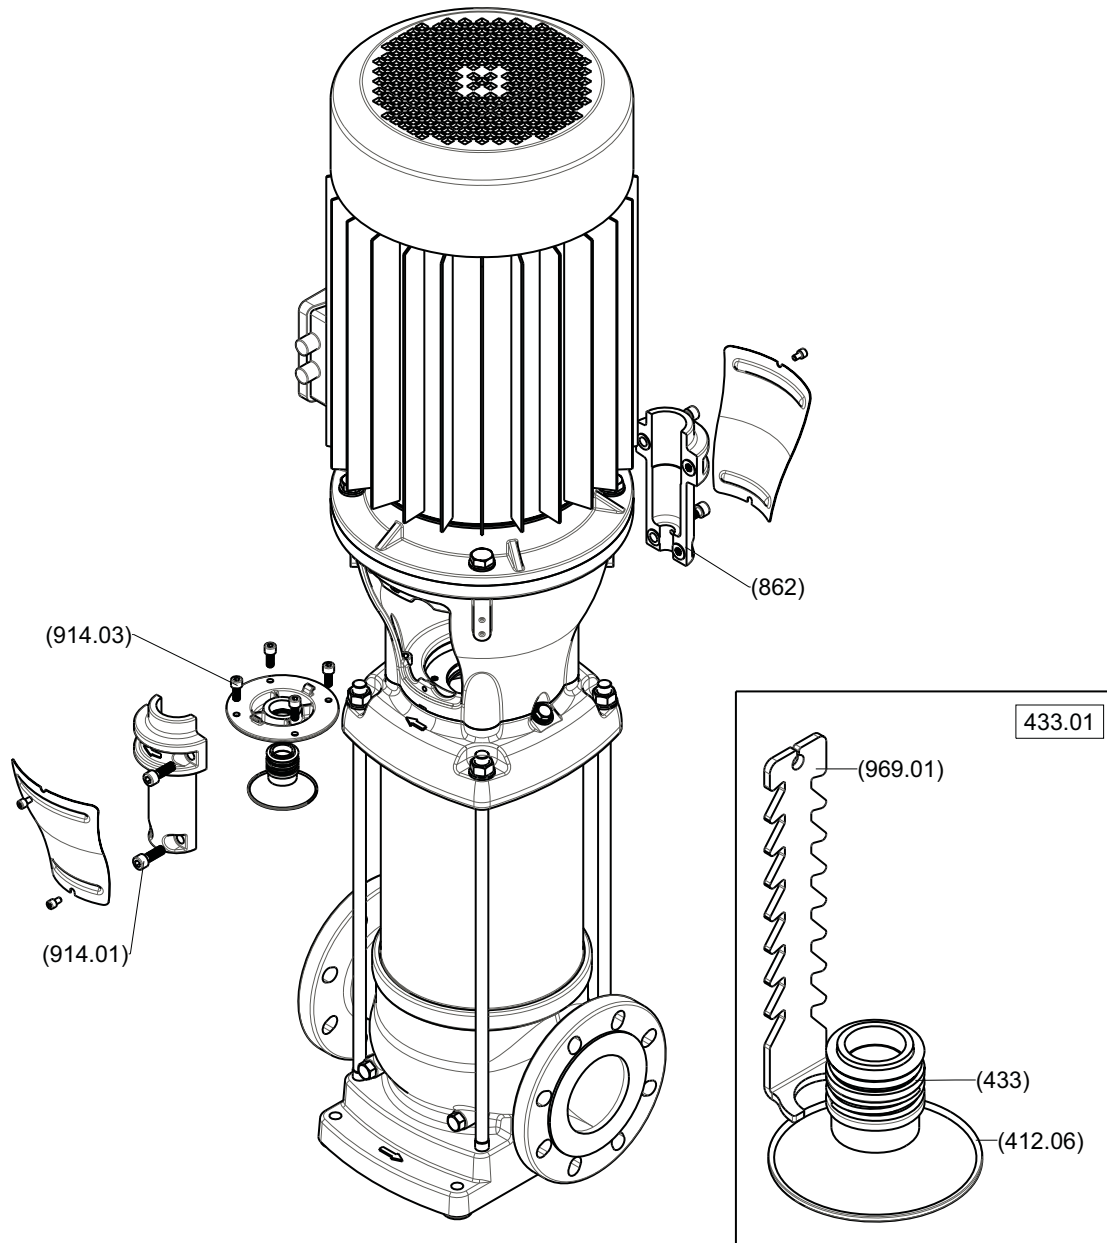

1

Figure 1: Replacing Easy Access seal

Pos.	Size	Torque
914.01	M10	70 Nm
914.03	M8	10 Nm

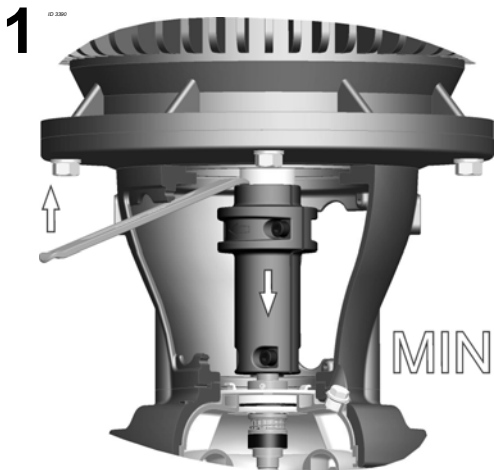


Figure 2: Adjusting the Easy Access seal

20090911

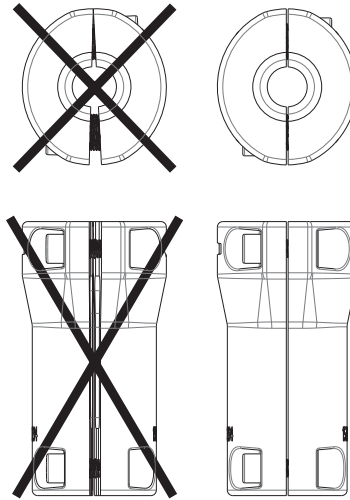


Figure 4: Tighten the coupling

20090528

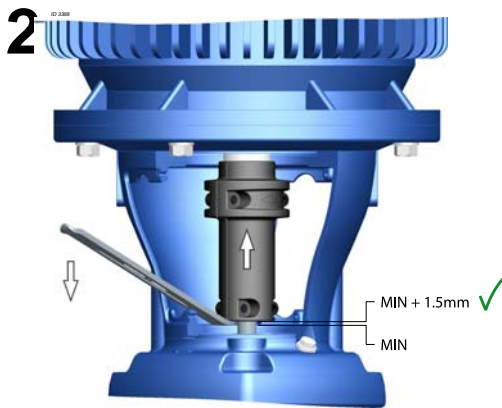


Figure 3: Adjusting the Easy Access seal

20091289-A

